

# Editing Bridgesorter/Duplimate parameters

## 1. Install VNC

1.1 Download VNC from: <https://www.realvnc.com/en/connect/download/viewer/>

1.2 Install VNC onto your computer

## 2. Connect to machine's nw

Connect your computer to the machine's WiFi network. Both the user name and the password = machine's name & number.

BridgeSorter no. 1234 will for example set up network BridgeSorter1234 that you can connect to with ssid: BridgeSorter1234 and password: BridgeSorter1234

Duplimate no. 5678 will set up network Duplimate5678 with ssid Duplimate5678 and pw Duplimate5678.

## 3. Access machine

Connect VNC to 192.168.233.1 You will be asked for username: pi

password: trising600

This will lead to the machine's Desktop



Username:

Password:  

Remember password [Forgot password?](#)

## 4. Machine's file structure

You should ONLY open (edit) files in STORAGE. Double-click on the STORAGE icon to display the content.

The important files are found in /STORAGE/CONFIG. Change/replace the file(s) in this library as instructed by the Help desk.

