
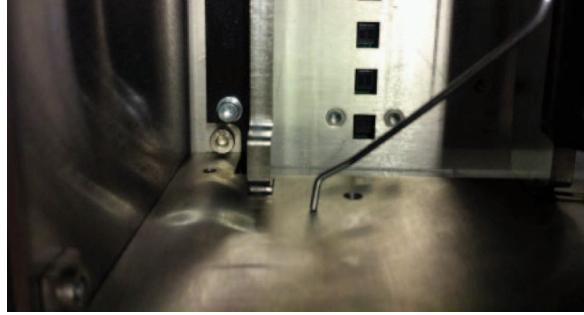


# Removing the cover

1. Release the gates from their rest positions

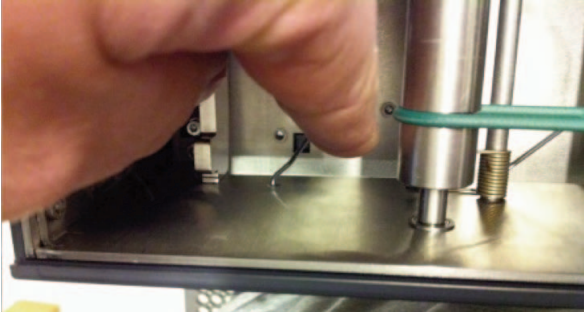

2. Remove the 6 screws holding the cover
3. Bend the cover somewhat (outwards) while lifting